

Directions for Wall Mount

If you are using the included plastic anchors to mount the camera, drill a 3/16" hole and insert the plastic anchors.

If you are mounting directly to wood or into a stud, drill a 1/16" hole pilot hole for the included screws.

For Outdoor Placement:

For outdoor placement the mount must be sealed properly. Use outdoor rated silicone caulk to seal all openings.

Seal in these locations:

- 1. Around the base of the mount where it contacts the wall.
- Around the base of the camera where it attaches to the mount.
- 3. Around the mounting screws.



Failure to properly seal the mount to the applied surface may cause water intrusion and void camera warranty.