

PRINTING INSTRUCTIONS


To print this document, you can right-click the screen, and then click print to print from your browser. You can also download the document to your computer, open it in Adobe Reader or another program, and print using that program.

Make sure you select the option to print this document at its actual size. Failure to do so may result in an incorrect size for this template.

To confirm that you have printed at actual size, use the ruler graphic below. Each division on the graphic should be 1 inch in length when measured with a ruler or measuring tape.

EACH SECTION OF THE RULER GRAPHIC SHOULD MEASURE 1 INCH WHEN THIS DOCUMENT IS PRINTED

PLEASE CONFIRM EACH SECTION OF THE RULER GRAPHIC MEASURES 1 INCH

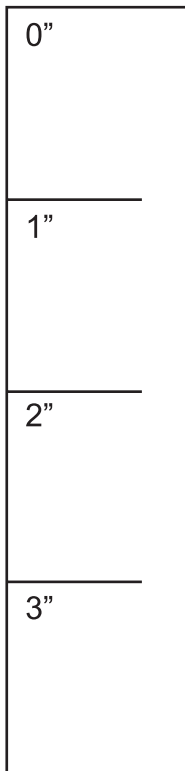

MOUNTING INSTRUCTIONS

Once you have printed the mounting template, follow these instructions to drill holes for your camera.

1. Cut around the outer circle of the camera template.
2. Tape the template to the location you want to mount your camera.
3. If you want to route the cable through a wall or ceiling, use a 7/8" bit to drill a hole for the cable connector.
4. If you are using the plastic anchors to mount the camera, use a 3/16" bit to drill a hole through the paper and wall or ceiling for the plastic anchors.
5. If you are mounting directly to wood or into a stud, use a 1/16" bit to drill a pilot hole for the included screws through the paper and wall or ceiling.
6. Remove the template from the location.
7. Insert the plastic anchors into the smaller holes.
8. Follow the installation instructions included with your camera.

